
kas Documentation

Release 0.14.0

Daniel Wagner, Jan Kiszka, Claudius Heine

Nov 10, 2017

Contents

1	Introduction and installation	3
2	User Guide	5
2.1	Dependencies & installation	5
2.2	Usage	5
2.3	Use Cases	8
2.4	Project Configuration	8
3	Developer Guide	13
3.1	Deploy for development	13
3.2	Docker image build	13
3.3	Community Resources	13
3.4	Class reference documentation	14
4	Configuration Format Changes	19
4.1	Version 1 (Alias '0.10')	19
4.2	Version 2	19
4.3	Version 3	19
4.4	Version 4	20
5	Indices and tables	21
	Python Module Index	23

Contents:

Introduction and installation

This tool provides an easy mechanism to setup bitbake based projects.

The OpenEmbedded tooling support starts at step 2 with bitbake. The downloading of sources and then configuration has to be done by hand. Usually, this is explained in a README. Instead kas is using a project configuration file and does the download and configuration phase.

Currently supported Yocto versions:

- 2.1 (Krogoth)
- 2.2 (Morty)

Older or newer versions may work as well but haven't been tested intensively.

Key features provided by the build tool:

- clone and checkout bitbake layers
- create default bitbake settings (machine, arch, ...)
- launch minimal build environment, reducing risk of host contamination
- initiate bitbake build process

2.1 Dependencies & installation

This projects depends on

- Python 3
- distro Python 3 package
- jsonschema Python 3 package
- PyYAML Python 3 package (optional, for yaml file support)

If you need Python 2 support consider sending patches. The most obvious place to start is to use the trollius package instead of asyncio.

To install kas into your python site-package repository, run:

```
$ sudo pip3 install .
```

2.2 Usage

There are three options for using kas:

- Install it locally via pip to get the `kas` command.
- Use the docker image. In this case, run the commands in the examples below within `docker run -it kasproject/kas:<version> sh` or bind-mount the project into the container. See <https://hub.docker.com/r/kasproject> for all available images.
- Use the **run-kas** wrapper from this directory. In this case replace `kas` in the examples below with `path/to/run-kas`.

Start build:

```
$ kas build /path/to/kas-project.yml
```

Alternatively, experienced bitbake users can invoke usual **bitbake** steps manually, e.g.:

```
$ kas shell /path/to/kas-project.yml -c 'bitbake dosfsutils-native'
```

kas will place downloads and build artifacts under the current directory when being invoked. You can specify a different location via the environment variable *KAS_WORK_DIR*.

2.2.1 Command line usage

kas - setup tool for bitbake based project

```
usage: kas [-h] [--version] [-d] {build,shell} ...
```

Positional Arguments

cmd	Possible choices: build, shell sub command help
------------	--

Named Arguments

--version	show program's version number and exit
-d, --debug	Enable debug logging Default: False

Sub-commands:

build

Checks out all necessary repositories and builds using bitbake as specified in the configuration file.

```
kas build [-h] [--target TARGET] [--task TASK] [--skip SKIP] config
```

Positional Arguments

config	Config file
---------------	-------------

Named Arguments

--target	Select target to build
--task	Select which task should be executed
--skip	Skip build steps Default: []

shell

Run a shell in the build environment.

```
kas shell [-h] [--target TARGET] [--skip SKIP] [-k] [-c COMMAND] config
```

Positional Arguments

config	Config file
---------------	-------------

Named Arguments

--target	Select target to build Default: “core-image-minimal”
--skip	Skip build steps Default: []
-k, --keep-config-unchanged	Skip steps that change the configuration Default: False
-c, --command	Run command Default: “”

2.2.2 Environment variables

Environment variables	Description
KAS_WORK_DIR	The path of the kas work directory, current work directory is the default.
KAS_REPO_REF_DIR	The path to the repository reference directory. Repositories in this directory are user as references when cloning. In order for kas to find those repositories, they have to be named in a specific way. The repo URLs are translated like this: “https://github.com/siemens/meta-iot2000.git” resolves to the name “github.com.siemens.meta-iot2000.git”.
KAS_DISTRO KAS_MACHINE KAS_TARGET KAS_TASK	This overwrites the respective setting in the configuration file.
SSH_PRIVATE_KEY	Path to the private key file that should be added to an internal ssh-agent. This key cannot be password protected. This setting is useful for CI build servers. On desktop machines, an ssh-agent running outside the kas environment is more useful.
SSH_AGENT_PID SSH_AUTH_SOCK	SSH agent process id and authentication socket. Used for cloning over SSH (alternative to SSH_PRIVATE_KEY).
DL_DIR SSTATE_DIR TMPDIR	Environment variables that are transferred to the bitbake environment.
http_proxy https_proxy ftp_proxy no_proxy	This overwrites the proxy configuration in the configuration file.
GIT_PROXY_COMMAND NO_PROXY	Set proxy for native git fetches. NO_PROXY is evaluated by OpenEmbedded’s oe-git-proxy script.
SHELL	The shell to start when using the <i>shell</i> plugin.
TERM	The terminal options used in the <i>shell</i> plugin.

2.3 Use Cases

1. Initial build/setup:

```
$ mkdir $PROJECT_DIR
$ cd $PROJECT_DIR
$ git clone $PROJECT_URL meta-project
$ kas build meta-project/kas-project.yml
```

2. Update/rebuild:

```
$ cd $PROJECT_DIR/meta-project
$ git pull
$ kas build kas-project.yml
```

2.4 Project Configuration

Currently JSON and YAML is supported as the base file format. Since YAML is arguable easier to read, this documentation focuses on the YAML format.

```
# Every file needs to contain a header, that provides kas with information
# about the context of this file.
header:
```

```

# The `version` entry in the header describes for which configuration
# format version this file was created for. It is used by kas to figure
# out if it is compatible with this file. The version is an integer that
# is increased on every format change.
version: x
# The machine as it is written into the `local.conf` of bitbake.
machine: qemu
# The distro name as it is written into the `local.conf` of bitbake.
distro: poky
repos:
# This entry includes the repository where the config file is located
# to the bblayers.conf:
meta-custom:
# Here we include a list of layers from the poky repository to the
# bblayers.conf:
poky:
url: "https://git.yoctoproject.org/git/poky"
refspec: 89e6c98d92887913cadf06b2adb97f26cde4849b
layers:
meta:
meta-poky:
meta-yocto-bsp:

```

A minimal input file consist out of the header, machine, distro, and repos.

Additionally, you can add `bblayers_conf_header` and `local_conf_header` which are strings that are added to the head of the respective files (`bblayers.conf` or `local.conf`):

```

bblayers_conf_header:
meta-custom: |
    POKY_BBLAYERS_CONF_VERSION = "2"
    BBPATH = "${TOPDIR}"
    BBFILES ?= ""
local_conf_header:
meta-custom: |
    PATCHRESOLVE = "noop"
    CONF_VERSION = "1"
    IMAGE_FSTYPES = "tar"

```

`meta-custom` in these examples should be a unique name (in project scope) for this configuration entries. We assume that your configuration file is part of a `meta-custom` repository/layer. This way its possible to overwrite or append entries in files that include this configuration by naming an entry the same (overwriting) or using a unused name (appending).

2.4.1 Including in-tree configuration files

Its currently possible to include kas configuration files from the same repository/layer like this:

```

header:
version: x
includes:
- base.yml
- bsp.yml
- product.yml

```

The specified files are addressed relative to your current configuration file.

2.4.2 Including configuration files from other repos

Its also possible to include configuration files from other repos like this:

```
header:
  version: x
  includes:
    - repo: poky
      file: kas-poky.yml
    - repo: meta-bsp-collection
      file: hwl/kas-hw-bsp1.yml
    - repo: meta-custom
      file: products/product.yml
repos:
  meta-custom:
  meta-bsp-collection:
    url: "https://www.example.com/git/meta-bsp-collection"
    refspec: 3f786850e387550fdab836ed7e6dc881de23001b
    layers:
      # Additional to the layers that are added from this repository
      # in the hwl/kas-hw-bsp1.yml, we add here an additional bsp
      # meta layer:
    meta-custom-bsp:
  poky:
    url: "https://git.yoctoproject.org/git/poky"
    refspec: 89e6c98d92887913cadf06b2adb97f26cde4849b
    layers:
      # If `kas-poky.yml` adds the `meta-yocto-bsp` layer and we
      # do not want it in our bblayers for this project, we can
      # overwrite it by setting:
    meta-yocto-bsp: exclude
```

The files are addressed relative to the git repository path.

The include mechanism collects and merges the content from top to bottom and depth first. That means that settings in one include file are overwritten by settings in a latter include file and entries from the last include file can be overwritten by the current file. While merging all the dictionaries are merged recursive while preserving the order in which the entries are added to the dictionary. This means that `local_conf_header` entries are added to the `local.conf` file in the same order in which they are defined in the different include files. Note that the order of the configuration file entries is not preserved within one include file, because the parser creates normal unordered dictionaries.

2.4.3 Configuration reference

- **header: dict [required]** The header of every kas configuration file. It contains information about context of the file.
 - **version: integer [required]** Lets kas check if it is compatible with this file. See the *configuration format changelog* for the format history and latest available version.
 - **includes: list [optional]** A list of configuration files this current file is based on. They are merged in order they are stated. So a latter one could overwrite settings from previous files. The current file can overwrite settings from every included file. An item in this list can have one of two types:
 - * **item: string** The path to a kas configuration file, relative to the current file.
 - * **item: dict** If files from other repositories should be included, choose this representation.
 - **repo: string [required]** The id of the repository where the file is located. The repo needs to be defined in the `repos` dictionary as `<repo-id>`.

- **file: string [required]** The path to the file relative to the root of the repository.
- **machine: string [optional]** Contains the value of the `MACHINE` variable that is written into the `local.conf`. Can be overwritten by the `KAS_MACHINE` environment variable and defaults to `qemu`.
- **distro: string [optional]** Contains the value of the `DISTRO` variable that is written into the `local.conf`. Can be overwritten by the `KAS_DISTRO` environment variable and defaults to `poky`.
- **target: string [optional] or list [optional]** Contains the target or a list of targets to build by bitbake. Can be overwritten by the `KAS_TARGET` environment variable and defaults to `core-image-minimal`. Space is used as a delimiter if multiple targets should be specified via the environment variable.
- **task: string [optional]** Contains the task to build by bitbake. Can be overwritten by the `KAS_TASK` environment variable and defaults to `build`.
- **repos: dict [optional]** Contains the definitions of all available repos and layers.
 - **<repo-id>: dict [optional]** Contains the definition of a repository and the layers, that should be part of the build. If the value is `None`, the repository, where the current configuration file is located is defined as `<repo-id>` and added as a layer to the build.
 - * **name: string [optional]** Defines under which name the repository is stored. If its missing the `<repo-id>` will be used.
 - * **url: string [optional]** The url of the git repository. If this is missing, no git operations are performed.
 - * **refspec: string [optional]** The refspec that should be used. Required if an url was specified.
 - * **path: string [optional]** The path where the repository is stored. If the url and path is missing, the repository where the current configuration file is located is defined. If the url is missing and the path defined, this entry references the directory the path points to. If the url as well as the path is defined, the path is used to overwrite the checkout directory, that defaults to `kas_work_dir + repo.name`.
 - * **layers: dict [optional]** Contains the layers from this repository that should be added to the `bblayers.conf`. If this is missing or `None` or an empty dictionary, the path to the repo itself is added as a layer.
 - **<layer-path>: enum [optional]** Adds the layer with `<layer-path>` that is relative to the repository root directory, to the `bblayers.conf` if the value of this entry is not in this list: `['disabled', 'excluded', 'n', 'no', '0', 'false']`. This way it is possible to overwrite the inclusion of a layer in latter loaded configuration files.
- **bblayers_conf_header: dict [optional]** This contains strings that should be added to the `bblayers.conf` before any layers are included.
 - **<bblayers-conf-id>: string [optional]** A string that is added to the `bblayers.conf`. The entry id (`<bblayers-conf-id>`) should be unique if lines should be added and can be the same from another included file, if this entry should be overwritten. The lines are added to `bblayers.conf` in the same order as they are included from the different configuration files.
- **local_conf_header: dict [optional]** This contains strings that should be added to the `local.conf`.
 - **<local-conf-id>: string [optional]** A string that is added to the `local.conf`. It operates in the same way as the `bblayers_conf_header` entry.
- **proxy_config: dict [optional]** Defines the proxy configuration bitbake should use. Every entry can be overwritten by the respective environment variables.
 - `http_proxy: string [optional]`
 - `https_proxy: string [optional]`

- `no_proxy`: string [optional]

3.1 Deploy for development

This project uses pip to manage the package. If you want to work on the project yourself you can create the necessary links via:

```
$ sudo pip3 install -e .
```

That will install a backlink /usr/bin/kas to this project. Now you are able to call it from anywhere.

3.2 Docker image build

Just run:

```
$ docker build -t <image_name> .
```

When you need a proxy to access the internet, add:

```
--build-arg http_proxy=<http_proxy> --build-arg https_proxy=<https_proxy> --build-arg ↵  
↵ftp_proxy=<ftp_proxy> --build-arg no_proxy=<no_proxy>
```

to the call.

3.3 Community Resources

Project home:

- <https://github.com/siemens/kas>

Source code:

- <https://github.com/siemens/kas.git>
- [git@github.com:siemens/kas.git](https://github.com:siemens/kas.git)

Documentation:

- <https://kas.readthedocs.org>

Mailing list:

- kas-devel@googlegroups.com
- Subscription:
 - kas-devel+subscribe@googlegroups.com
 - <https://groups.google.com/forum/#!forum/kas-devel/join>
- Archives
 - <https://groups.google.com/forum/#!forum/kas-devel>
 - <https://www.mail-archive.com/kas-devel@googlegroups.com/>

3.4 Class reference documentation

3.4.1 `kas.kas` Module

This module is the main entry point for kas, setup tool for bitbake based projects

```
kas.kas.create_logger ()
    Setup the logging environment

kas.kas.interruption ()
    Ignore SIGINT/SIGTERM in kas, let them be handled by our sub-processes

kas.kas.kas (argv)
    The main entry point of kas.

kas.kas.kas_get_argparser ()
    Creates a argparser for kas with all plugins.

kas.kas.main ()
    The main function that operates as a wrapper around kas.
```

3.4.2 `kas.libkas` Module

This module contains the core implementation of kas.

```
class kas.libkas.LogOutput (live)
    Handles the log output of executed applications

    log_stderr (line)
        This method is called when a line over stderr is received.

    log_stdout (line)
        This method is called when a line over stdout is received.

kas.libkas.find_program (paths, name)
    Find a file within the paths array and returns its path.
```

`kas.libkas.get_build_environ (config, build_dir)`
Create the build environment variables.

`kas.libkas.kasplugin (plugin_class)`
A decorator that registers kas plugins

`kas.libkas.repo_checkout (config, repo)`
Checks out the correct revision of the repo.

`kas.libkas.repos_fetch (config, repos)`
Fetches the list of repositories to the `kas_work_dir`.

`kas.libkas.run_cmd (cmd, cwd, env=None, fail=True, shell=False, liveupdate=True)`
Runs a command synchronously.

`kas.libkas.run_cmd_async (cmd, cwd, env=None, fail=True, shell=False, liveupdate=True)`
Run a command asynchronously.

`kas.libkas.ssh_add_key (env, key)`
Add ssh key to the ssh-agent

`kas.libkas.ssh_cleanup_agent (config)`
Removes the identities and stop the ssh-agent instance

`kas.libkas.ssh_no_host_key_check (_)`
Disables ssh host key check

`kas.libkas.ssh_setup_agent (config, envkeys=None)`
Starts the ssh-agent

3.4.3 kas.libcmds Module

This module contains common commands used by kas plugins.

class `kas.libcmds.CleanupSSHAgent`
Remove all the identities and stop the ssh-agent instance.

class `kas.libcmds.Command`
An abstract class that defines the interface of a command.

execute (*config*)
This method executes the command.

class `kas.libcmds.Macro`
Contains commands and provides method to run them.

add (*command*)
Appends commands to the command list.

run (*config*, *skip=None*)
Runs command from the command list respective to the configuration.

class `kas.libcmds.ReposCheckout`
Ensures that the right revision of each repo is checked out.

class `kas.libcmds.ReposFetch`
Fetches repositories defined in the configuration

class `kas.libcmds.SetupDir`
Creates the build directory.

class `kas.libcmds.SetupEnviron`
Sets up the kas environment.

```
class kas.libcmds.SetupHome
    Setups the home directory of kas.

class kas.libcmds.SetupProxy
    Setups proxy configuration in the kas environment.

class kas.libcmds.SetupSSHAgent
    Setup the ssh agent configuration.

class kas.libcmds.WriteConfig
    Writes bitbake configuration files into the build directory.
```

3.4.4 kas.build Module

The build plugin for kas.

```
class kas.build.BuildCommand(task)
    Implement the bitbake build step.

    execute(config)
        Executes the bitbake build command.
```

3.4.5 kas.shell Module

This module contains a kas plugin that opens a shell within the kas environment

```
class kas.shell.ShellCommand(cmd)
    This class implements the command that starts a shell.
```

3.4.6 kas.config Module

This module contains the implementation of the kas configuration.

```
class kas.config.Config(filename, target, task=None)
    Implements the kas configuration based on config files.

    build_dir
        The path of the build directory.

    get_bblayers_conf_header()
        Returns the bblayers.conf header

    get_bitbake_targets()
        Returns a list of bitbake targets

    get_bitbake_task()
        Return the bitbake task

    get_distro()
        Returns the distro

    get_gitlabci_config()
        Returns the GitlabCI configuration

    get_local_conf_header()
        Returns the local.conf header

    get_machine()
        Returns the machine
```

get_proxy_config()

Returns the proxy settings

get_repo_dict()

Returns a dictionary containing the repositories with their name (as it is defined in the config file) as key and the *Repo* instances as value.

get_repo_ref_dir()

The path to the directory that contains the repository references.

get_repos()

Returns the list of repos.

kas_work_dir

The path to the kas work directory.

setup_environ()

Sets the environment variables for process that are started by kas.

`kas.config.get_distro_id()`

Wrapper around platform.dist to simulate distro.id platform.dist is deprecated and will be removed in python 3.7 Use the 'distro' package instead.

3.4.7 kas.repos Module

This module contains the Repo class.

class `kas.repos.Repo(url, path, refspec=None, layers=None)`

Represents a repository in the kas configuration.

disable_git_operations()

Disabled all git operation for this repository.

3.4.8 kas.includehandler Module

Configuration Format Changes

4.1 Version 1 (Alias '0.10')

4.1.1 Added

- Include mechanism
- Version check

4.2 Version 2

4.2.1 Changed

- Configuration file versions are now integers

4.2.2 Fixed

- Including files from repos that are not defined in the current file

4.3 Version 3

4.3.1 Added

- Task key that allows to specify which task to run (`bitbake -c`)

4.4 Version 4

4.4.1 Added

- `Target` key now allows to be a list of target names

CHAPTER 5

Indices and tables

- `genindex`
- `modindex`
- `search`

k

- `kas.build`, [16](#)
- `kas.config`, [16](#)
- `kas.kas`, [14](#)
- `kas.libcmds`, [15](#)
- `kas.libkas`, [14](#)
- `kas.repos`, [17](#)
- `kas.shell`, [16](#)

A

add() (kas.libcmds.Macro method), 15

B

build_dir (kas.config.Config attribute), 16

BuildCommand (class in kas.build), 16

C

CleanupSSHAgent (class in kas.libcmds), 15

Command (class in kas.libcmds), 15

Config (class in kas.config), 16

create_logger() (in module kas.kas), 14

D

disable_git_operations() (kas.repos.Repo method), 17

E

execute() (kas.build.BuildCommand method), 16

execute() (kas.libcmds.Command method), 15

F

find_program() (in module kas.libkas), 14

G

get_bblayers_conf_header() (kas.config.Config method),
16

get_bitbake_targets() (kas.config.Config method), 16

get_bitbake_task() (kas.config.Config method), 16

get_build_environs() (in module kas.libkas), 14

get_distro() (kas.config.Config method), 16

get_distro_id() (in module kas.config), 17

get_gitlabci_config() (kas.config.Config method), 16

get_local_conf_header() (kas.config.Config method), 16

get_machine() (kas.config.Config method), 16

get_proxy_config() (kas.config.Config method), 16

get_repo_dict() (kas.config.Config method), 17

get_repo_ref_dir() (kas.config.Config method), 17

get_repos() (kas.config.Config method), 17

I

interruption() (in module kas.kas), 14

K

kas() (in module kas.kas), 14

kas.build (module), 16

kas.config (module), 16

kas.kas (module), 14

kas.libcmds (module), 15

kas.libkas (module), 14

kas.repos (module), 17

kas.shell (module), 16

kas_get_argparser() (in module kas.kas), 14

kas_work_dir (kas.config.Config attribute), 17

kasplugin() (in module kas.libkas), 15

L

log_stderr() (kas.libkas.LogOutput method), 14

log_stdout() (kas.libkas.LogOutput method), 14

LogOutput (class in kas.libkas), 14

M

Macro (class in kas.libcmds), 15

main() (in module kas.kas), 14

R

Repo (class in kas.repos), 17

repo_checkout() (in module kas.libkas), 15

repos_fetch() (in module kas.libkas), 15

ReposCheckout (class in kas.libcmds), 15

ReposFetch (class in kas.libcmds), 15

run() (kas.libcmds.Macro method), 15

run_cmd() (in module kas.libkas), 15

run_cmd_async() (in module kas.libkas), 15

S

setup_environs() (kas.config.Config method), 17

SetupDir (class in kas.libcmds), 15

SetupEnviron (class in kas.libcmds), 15

SetupHome (class in kas.libcmds), [16](#)
SetupProxy (class in kas.libcmds), [16](#)
SetupSSHAgent (class in kas.libcmds), [16](#)
ShellCommand (class in kas.shell), [16](#)
ssh_add_key() (in module kas.libkas), [15](#)
ssh_cleanup_agent() (in module kas.libkas), [15](#)
ssh_no_host_key_check() (in module kas.libkas), [15](#)
ssh_setup_agent() (in module kas.libkas), [15](#)

W

WriteConfig (class in kas.libcmds), [16](#)